



Fireplace Scone	
DRAWN Larry Leonard	Brother Jonathan's Tin Shop Shrewsbury, Mass.
Date 8/28/10	

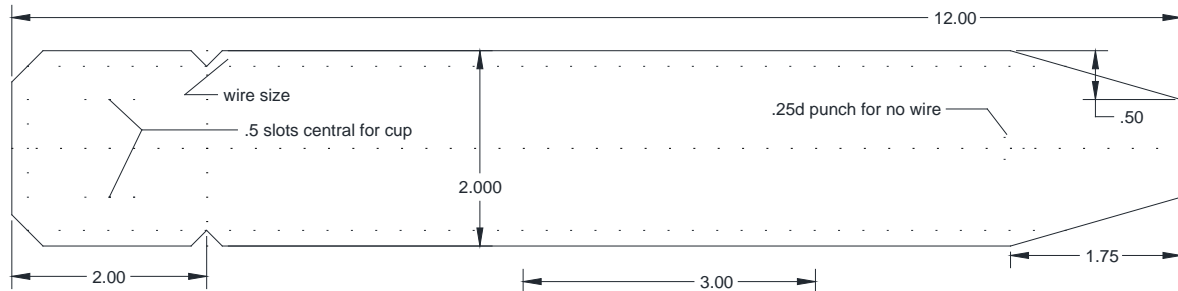

Fireplace Scence	
Drawn	Larry Leonard
Date	7/12
No Scale	
Brother Jonathan's Tin Shop Shrewsbury, Mass.	

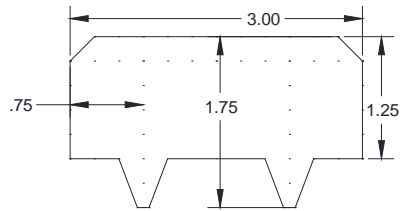

No punch for wired edge
 Fold hem to back for wire edge
 Set wire with creasing stake
 Bend hem forward for no wire
 Bend cup tabs to center
 Wire length +27"
 Start wire from bottom one side